


## Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “**DESTINATION**” button.

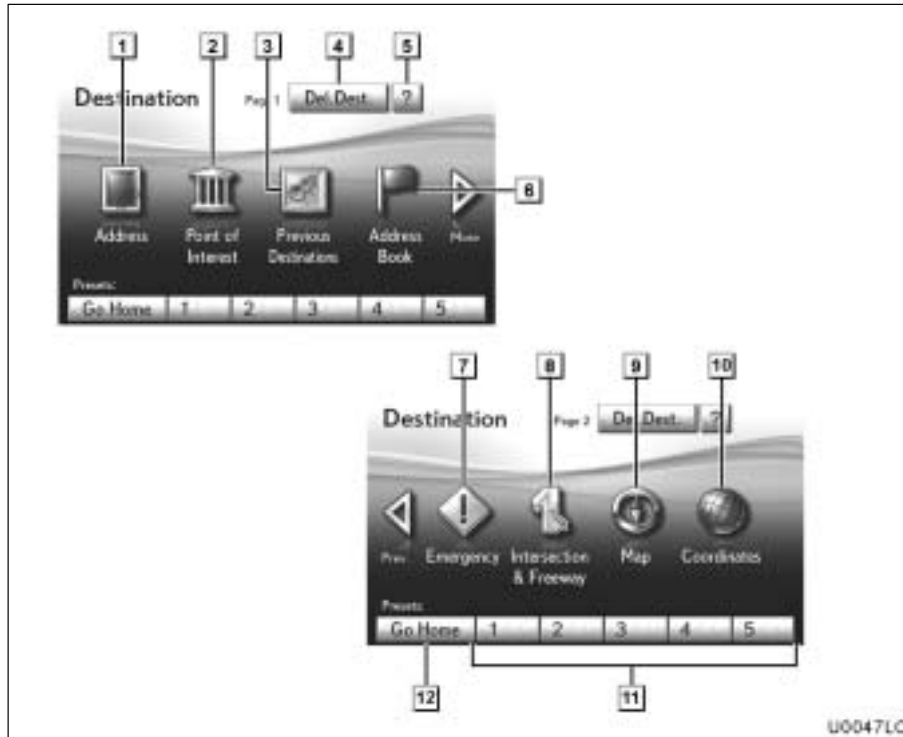

### 1 “Address”

A house number and the street address can be input by using the input keys. .... 65

### 2 “Point of Interest”

Select one of the many Points of Interest that have already been stored in the system’s database. .... 69

### 3 “Previous Destinations”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. .... 75

### 4 “Del. Dest.”

Set destinations can be deleted. .... 81

### 5 “?”

Function help for the “Destination” screen can be viewed on this screen. .... 34

### 6 “Address Book”

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 119.) .... 76

### 7 “Emergency”

One of the four categories of emergency service points that are already stored in the system’s database can be selected. .... 76

**8 “Intersection & Freeway”**

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known.  
..... 77

**9 “Map”**

A destination can be selected simply by touching the location on the displayed map. .... 80

**10 “Coordinates”**

A destination can be set using latitudes and longitudes as coordinates. .... 81

**11 Preset destination buttons**


One of 5 preset destination points can be selected by touching the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “preset destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 116.) ..... 64

**12 “Go Home”**

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 113.)  
..... 64

## Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “**SET UP**” button.

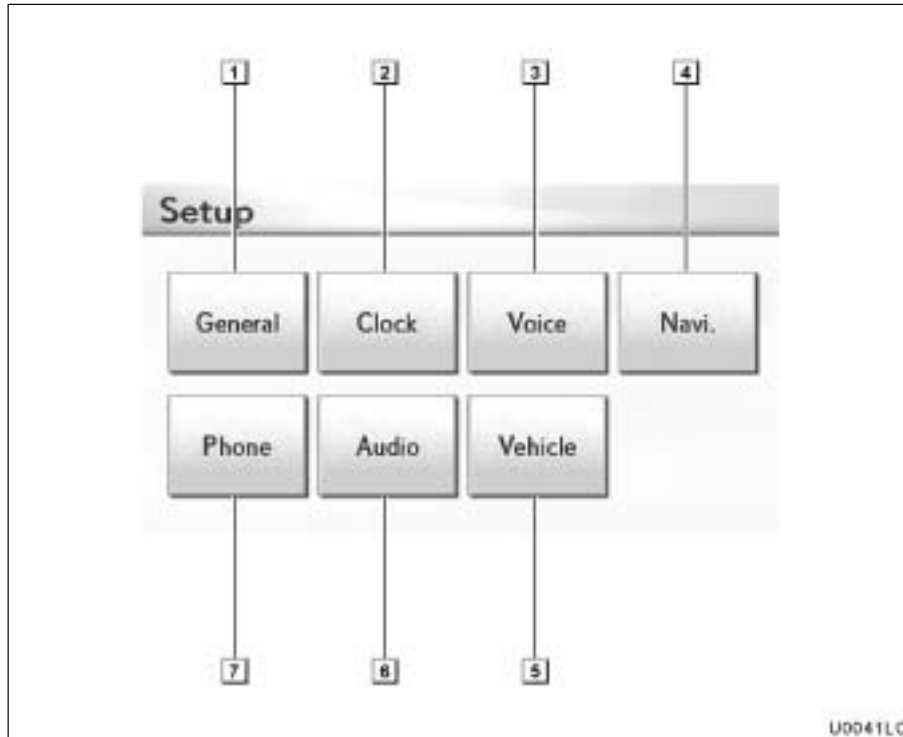

### 1 “General”

Settings are available for language selection, operation sounds, automatic screen change, etc. .... 238

### 2 “Clock”

Used for changing settings for time zones, daylight saving time, etc. .... 242

### 3 “Voice”

Voice guidance can be set. .... 244

### 4 “Navi.”

Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. .... 247

### 5 “Vehicle”

Settings are available for vehicle information such as maintenance information. .... 302

### 6 “Audio”


Settings are available for portable audio devices, Bluetooth® audio devices etc. .... 294

### 7 “Phone”

Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. .... 256

## Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the **“INFO”** button.

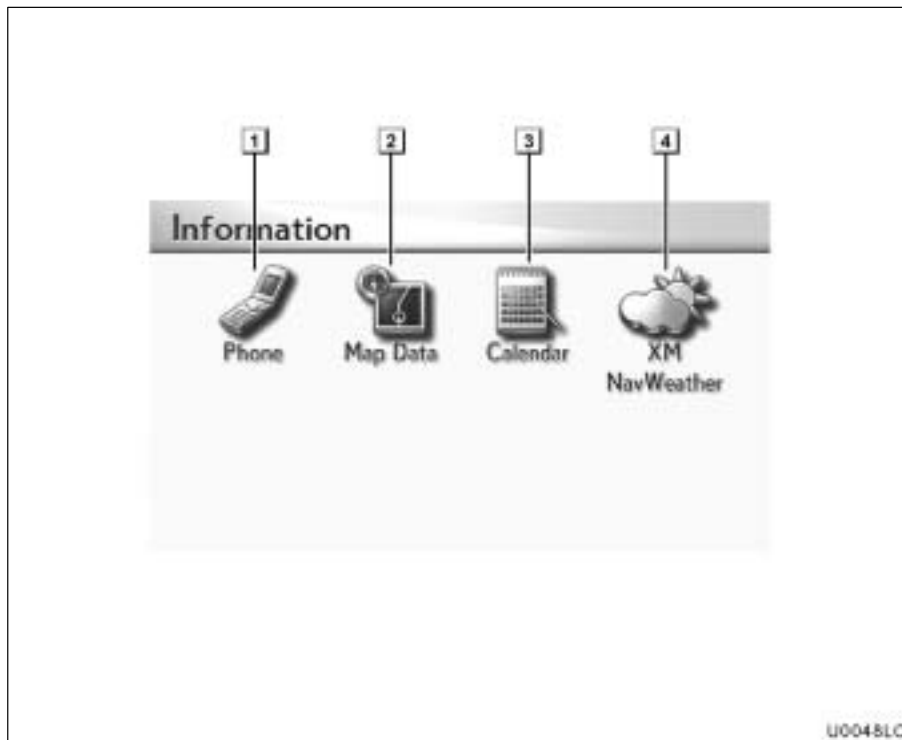

<b>1</b> “Phone”	
To view hands free phone information.	
.....	136
<b>2</b> “Map Data”	
Displays information regarding the map data disc version or coverage area.	
.....	319
<b>3</b> “Calendar”	
To view calendar. ....	151
<b>4</b> “XM NavWeather”	
To display the XM® NavWeather screen.	
.....	152

